
Installation Instructions



Land Rover Defender 2007-2016 2.4 & 2.2 PUMA



Mount & Drive

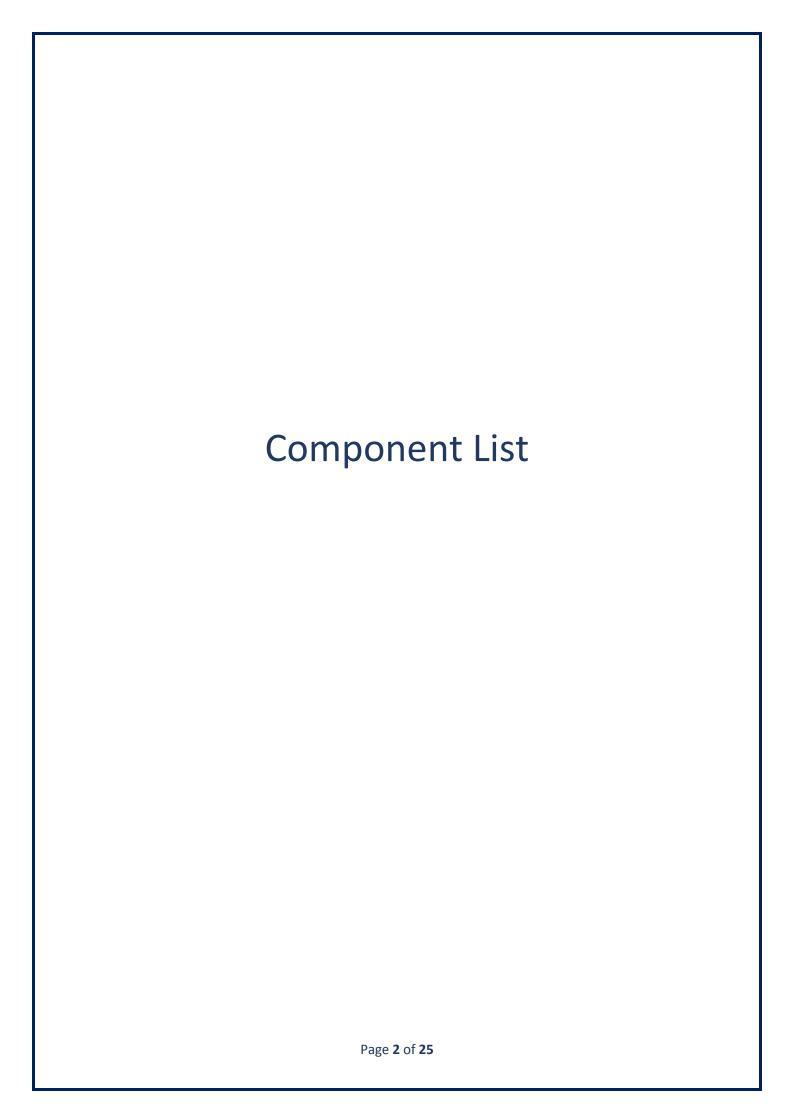

AK1288/01	PUMA Land Rover Defender Mount and	
	Drive Kit	
Part number	Description	Quantity
PQR500230	Idler	1
7 PK 2958 (2.4ltr)	Belt	1
7 PK 3001 (2.2ltr)	Belt	1
PRF500030	Compressor Cover	1
4101E	Compressor (Filled with oil)	1
BSC8-038	M8 x 110 hex head bolt	2
KYG500390	M8 Compressor Stud	1
W8-010	M8 Spring Washer	4
W8-004	M8 Plain Washer	4
BSC8-026	M8 x 20 Hex Head Setscrew	1

Evaporator Assembly



AK1288/02	PUMA Land Rover Defender Evaporator Assembly	
Part number	Description	Quantity
SB1190	Evaporator	1
	Assembly/Valve	
1398-900-01	Electronic thermostat	1
	(Plug may vary)	
M2602	Thermostat Clip	1
JTB500010	A/C Switch	1

Drier Assembly



SB1162	PUMA Land Rover Defender Drier Assembly	
Part Number	Description	Quantity
1368-077-01DE	Receiver Drier	1
M2449	Drier Bracket	1
N6-007	M6 T Nyloc Nut	1
BSC6-013	M6 x 16 Hex Head Set	1
	Screw	
W6-003	M6 Plain Washer	2
N6-011	M6 Flange Nut	2

Hoses and Pipes



AK1288/04	PUMA Land Rover Defender Hoses & Pipes	
Part Number	Description	Quantity
1.M2597/01	Condenser – Drier	1
2.1398-606-01E	Drier – Hose	1
3.M3238	Defender PUMA - #6/#10	1
	Combined Hose/Pipe	
	Assembly	
4.1398-965-02E	Compressor - Pipe	1
5.M2597/02	Pipe – Condenser	1


NOTE

Part number M3238 is supplied as a complete assembly and will need to be cut as per the image below for the 2.2 PUMA models. Once cut, the saddle bracket will need to be used for the installation to hold both halves in place on the expansion valve.





Wiring Loom

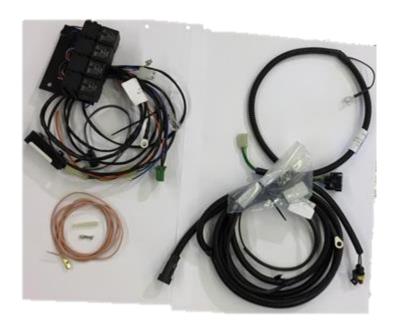


	PUMA Land Rover Defender Wiring Looms	
Part Number	Description	Quantity
1. M2599	Main Loom	1
2. M2600	Compressor Loom	1
3. M2601	Pressure Switch Loom	1
EXTAK1288	Extension Loom	1

Condenser Assembly






SB1187	PUMA Land Rover Defender Condenser Assembly	
Part Number	Description	Quantity
1991-455-01	Condenser	1
M2431	Condenser Fame	1
M2432	Condenser mount	2
	brackets	
VA07-AP7/C-31S	Condenser Fan	1
BR-004	4.8 x 12 Blind Rivet	4
N6-007	M6 Nyloc nut	8
W6-006	M6 Repair Washer	4
W6-003	M6 Plain Washer	14
W8-030	Rubber Washer	8
M1157	Pipe Clip	2
N6-011	M6 Serrated Flange nut	2
BSC6-016	M6 x 30 HEX HD	2
BSC6-017	M6 x 35 HEX HD	4
BSC6-019	M6 x 30 HEX HD	2

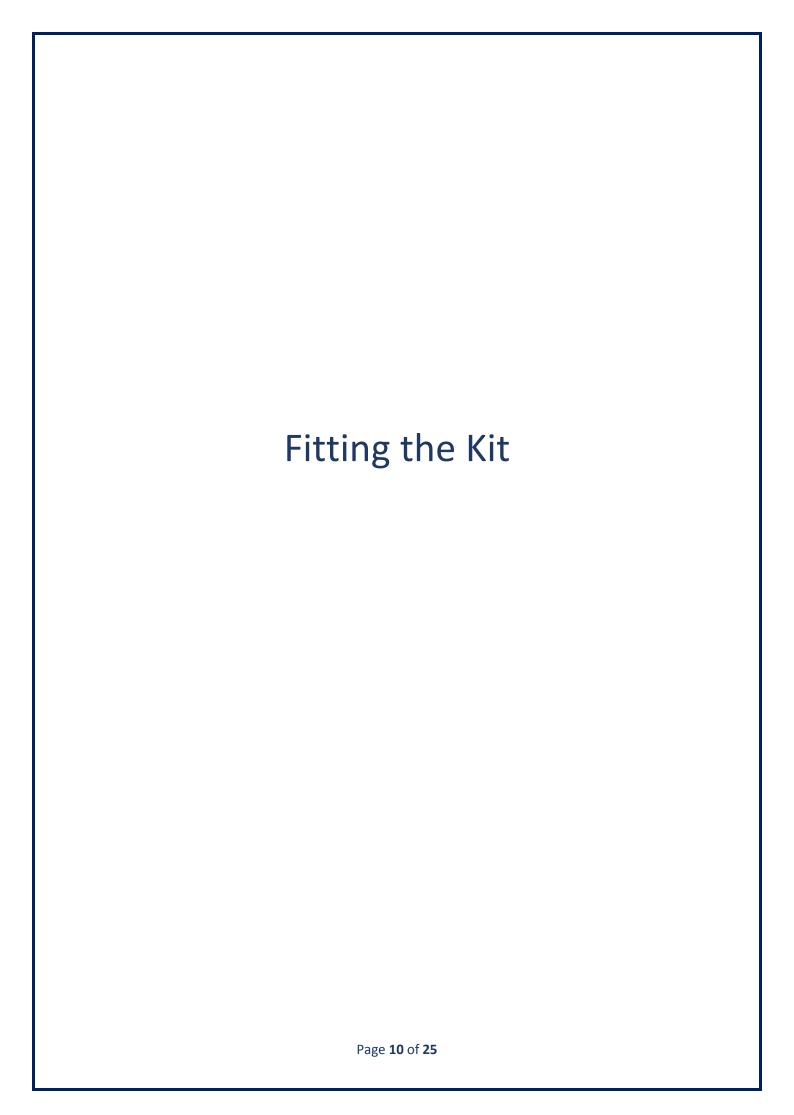

Interior



- 5. Remove the two screws from the facia
- 6. Remove the controls from the steering column.
- 7. Remove radio using keys
- 8. Remove instruments
- 9. Remove centre console and disconnect plugs.
- 10. Remove screws for heater controls and leave controls in situ.

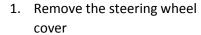

- 2. Remove the steering wheel using the special tool to do so. (Check Spline)
- 3. Remove the fuse box cover
- 4. Remove grab handle








- 11. Remove the dashboard screws at the side and lower part of the dashboard.
- 12. Remove dashboard screws at the top of the dashboard
- 13. Remove the speakers from the top of the dashboard and disconnect
- 14. Remove the parking brake and unbolt
- 15. Remove carpet n transmission tunnel
- 16. Remove gear lever cover



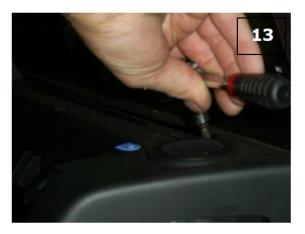



- 17. Remove Dashboard.
- 18. Remove duct from blower to heater box
- 19. Remove dashboard support bar.
- 20. Remove air ducts
- 21. Remove heater box










- 22. Split heater box
- 23. Install evaporator
- 24. Install thermostat probe as shown.




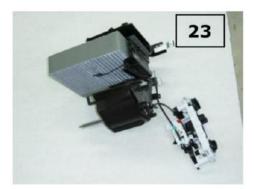

- 25. Ensure that the drain tube is clear
- 26. Re-assemble heater box
- 27. Re-install heater box
- 28. Remove fuse and relay box 4 nuts
- 29. Identify 20a and 10a A/C fuse locations.
- 30. Install terminals on A/C loom
 - a. Red wire into 20a fuse
 - b. Pink wire into 10a position
- 31. Fit fuses.
- 32. Re-fit fuse and relay box
- 33. Fit A/C loom relays sing bottom fuse, relay box fixing stud and nut.
- 34. Run A/C loom across the front of the heater box with heater control cable.
- 35. Solder the blue wire onto the blue wire on the heater control cable.
- 36. Solder the red and orange wire onto the red and orange wire for dash lights.



- 37. Ensure the green connector is in place for the switch
- 38. Cut the bulkhead grommet and push through from the engine bay, the compressor loom and the pressure switch loom.
- 39. Connect AC loom.
- 40. Connect thermostat

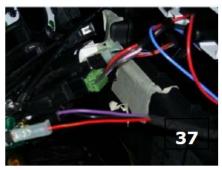





- 41. Fit A/C switch to centre panel
- 42. Re-install dash board reversing previous instructions
- 43. Insert green plug into A/C switch



Engine Compartment

- 1. Remove fan cowl and cooling fan.
- 2. Slacken tensioner to remove original belt and discard
- 3. Remove grooved idler pulley and discard.
- 4. Fit back idler to position indicated
- 5. Fit compressor assembly
- 6. Slacken tensioner and install new drive belt













- 7. Remove front grill.
- 8. Remove a frame and drill out rivets
- 9. Fix condenser mounting brackets using supplied rivets
- 10. Fit pipe M2597/02 to condenser before mounting (if not already fitted)
- 11. Fit condenser assembly





M2597/05 PIPE





- 12. Remove plastic cover on cylinder head to release loom
- 13. Undo and move ECU module to allow access to block valve
- 14. Connect earth from under bonnet looms to earth point near ECU
- 15. Remove power steering reservoir bracket and fit receiver drier bracket. Mount reservoir to drier bracket, fit receiver drier.











- 16. Fit pipe assembly to the block valve
- 17. Fit pipe to receiver drier
- 18. Connect the pipe assembly to the pipe leading to the receiver drier







- 19. Fit pipe from drier to condenser
- 20. Connect to compressor
- 21. Gas the system with 650g of R134a Refrigerant







Additional information













Additional information












Additional information







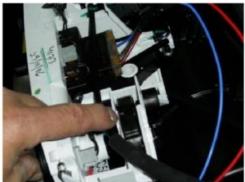










2200cc versions only

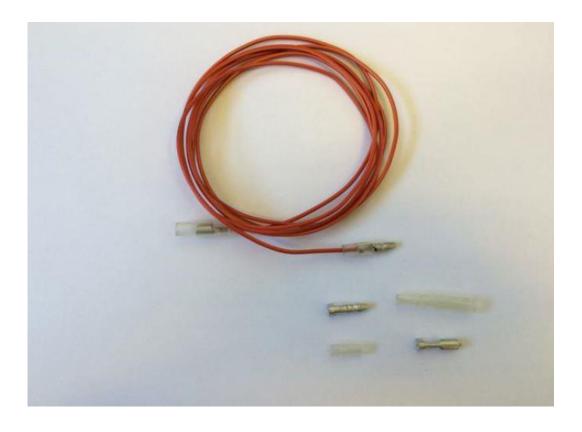

For the 2.2ltr models the wiring loom must be extended because the A/C fuse is located underneath the right hand side front seat. The A/C fuse is 20 amps.