

Defender/Series Spare Wheel Carrier

BRITPART

The quality parts for Land Rovers

FITTING INSTRUCTIONS

Part Number - DA2232


Before assembly please note the following:

1. When assembling, leave all nuts and bolts loose until assembly is complete to make fitting easier.
2. Before drilling carefully check that there are no cables or obstructions in the way.
3. Fitment of other aftermarket products may be affected.

Rear Door

1. Remove spare wheel.
2. Open rear door, remove door card.
3. Remove existing wheel carrier from door making sure to keep the original bolts.


Bottom Bracket

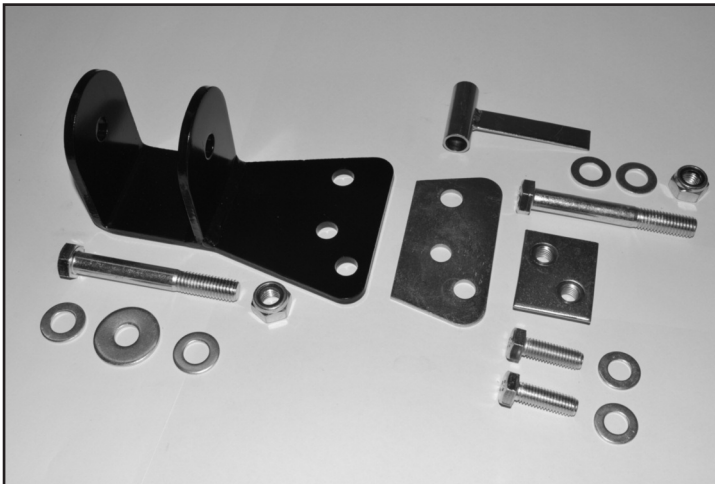


4. Remove grab handle from rear cross member on right hand side if fitted.
5. Bolt bottom bracket and spacer onto cross member using 2 x M10 bolts with the captive nutplate and 1 x M12 bolt putting spacer in the cross member - do note tighten at this stage.
Note: It may be necessary to drill out bolt holes in cross member to suit bolts.

Note: Supplied with 3 x M16x34 washers for alloy spare wheel fitment to carrier.

Top Bracket

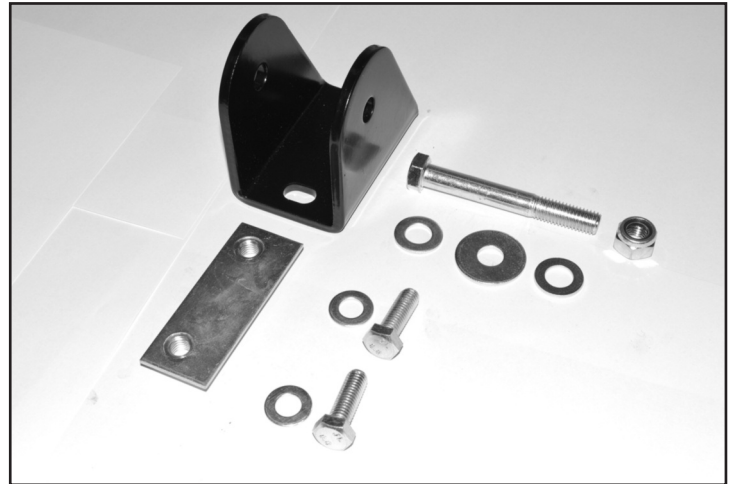

6. Drill out rivet on body capping as shown in picture below.

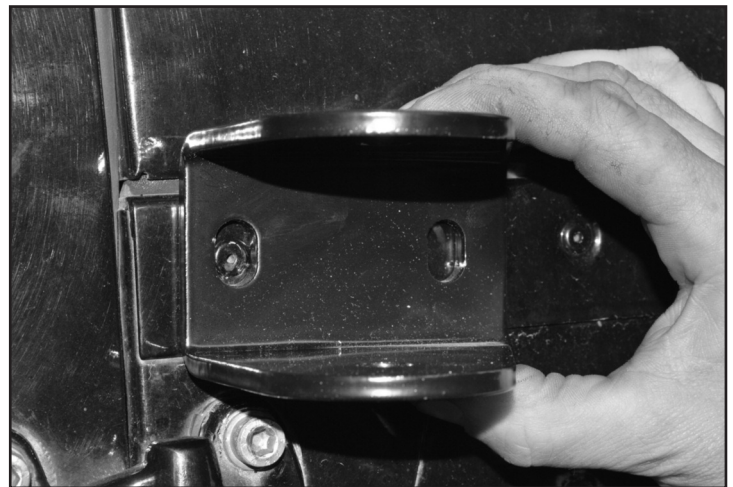

7. Place bracket over hole, centralise and mark second hole.
8. Drill both holes to 10.5mm . Fit bracket with bolts using captive nut plate inside rear body.

Disclaimer


These fitting instructions are intended for general guidance only. No responsibility will be accepted for damage to persons, property, equipment or vehicles caused during or arising from the fitment or using of this product. Fitting this item to your vehicle may constitute a vehicle modification and therefore we strongly recommend that you check the product complies with local laws and legislation and always inform the vehicle's insurance company accordingly. Vr: 4



FITTING INSTRUCTIONS - continued

Door Bracket

9. Fix door plate to door using existing bolts with centre four pins to left hand side.
(fig 1.) Use slotted holes for Defender 2002 - 2007
Use round holes for earlier Defenders and Series
10. Fit sliding arm to plate as shown in picture.

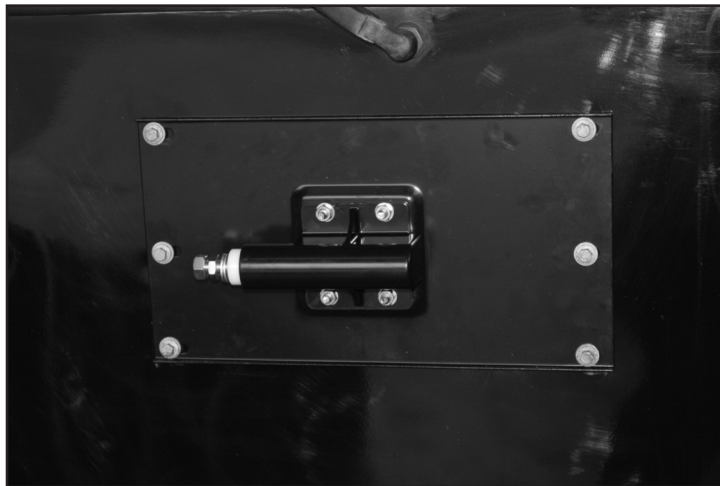

Wheel Carrier

11. Remove M12 nut from end of sliding mechanism.
12. Offer up wheel carrier by first locating sliding piece through carrier.
13. Put top and bottom pivot pins in place.
14. Once assembled, tighten up all nuts and bolts, check that the carrier moves freely when the door is opened and closed.
15. Refit spare wheel with existing wheel nuts.

